

8 Hints for Better Spectrum Analysis

Application Note 1286-1



Agilent Technologies

The Spectrum Analyzer

The spectrum analyzer, like an oscilloscope, is a basic tool used for observing signals. Where the oscilloscope provides a window into the time domain, the spectrum analyzer provides a window into the frequency domain, as depicted in Figure 1.

Figure 2 depicts a simplified block diagram of a swept-tuned superheterodyne spectrum analyzer. Superheterodyne means to mix or to translate in a frequency above audio frequencies. In the analyzer, a signal at the input travels through an attenuator to limit the amplitude of the signal at the mixer, and then through a low-pass input filter to eliminate undesirable frequencies. Past the input filter, the signal gets mixed with a signal generated by the local oscillator (LO) whose frequency is controlled by a sweep generator. As the frequency of the LO changes, the signals at the output of the mixer, (which include the two original signals, their sums and differences and their harmonics), get filtered by the resolution bandwidth filter (IF filter), and amplified or compressed in the logarithmic scale. A detector then rectifies the signal passing through the IF filter, producing a DC voltage that drives the vertical portion of the display. As the sweep generator sweeps through its frequency range, a trace is drawn across the screen. This trace shows the spectral content of the input signal within the selected frequency range.

When digital technology first became viable, it was used to digitize the video signal, as shown in Figure 2. As digital technology has advanced over the years, the spectrum analyzer has evolved to incorporate digital signal processing (DSP), after the final IF filter as shown by the dotted box, to be able to measure signal formats that are becoming increasingly complex. DSP is performed to provide improved dynamic range, faster sweep speed and better accuracy.

To get better spectrum analyzer measurements the input signal must be undistorted, the spectrum analyzer settings must be wisely set for application-specific measurements, and the measurement procedure optimized to take best advantage of the specifications. More details on these steps will be addressed in the hints.

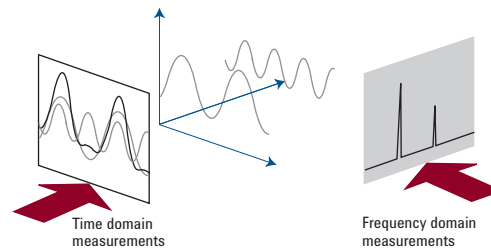


Figure 1. Measurement domain

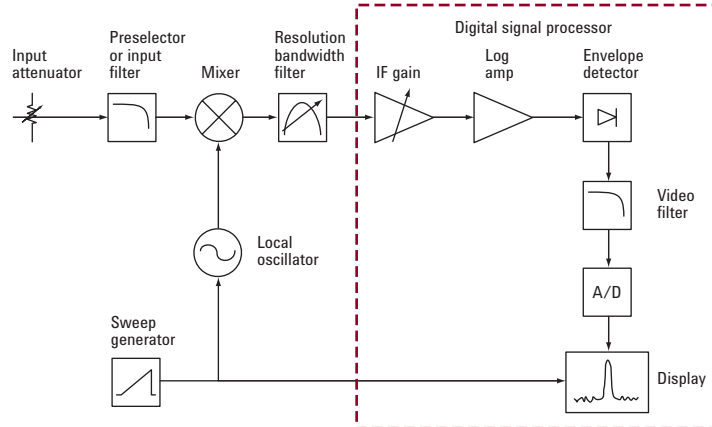


Figure 2. Block diagram of a superheterodyne spectrum analyzer

Hint 2. Improving Measurement Accuracy

Before making any measurement, it is important to know that there are several techniques that can be used to improve both amplitude and frequency measurement accuracies.

Available self-calibration routines will generate error coefficients (for example, amplitude changes versus resolution bandwidth), that the analyzer later uses to correct measured data, resulting in better amplitude measurements and providing you more freedom to change controls during the course of a measurement.

Once the device under test (DUT) is connected to the calibrated analyzer the signal delivery network may degrade or alter the signal of interest, which must be canceled out of the measurement as shown in Figure 6. One method of accomplishing this is to use the analyzer's built-in amplitude correction function in conjunction with a signal source and a power meter. Figure 7 depicts the frequency response of a signal delivery network that attenuates the DUT's signal. To cancel out unwanted effects, measure the attenuation or gain of the signal delivery network at the troublesome frequency points in the measurement range. Amplitude correction takes a list of frequency and amplitude pairs, linearly connects the points to make a correction "waveform," and then offsets the

input signal according to these corrections. In Figure 8, the unwanted attenuation and gain of the signal delivery network have been eliminated from the measurement, providing for more accurate amplitude measurements.

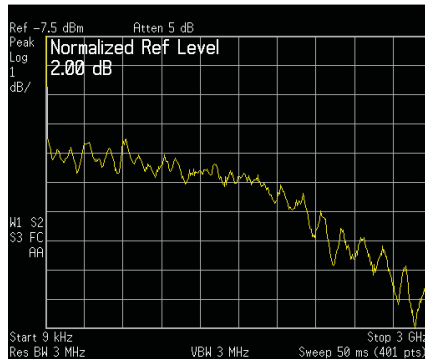


Figure 7. Original signal

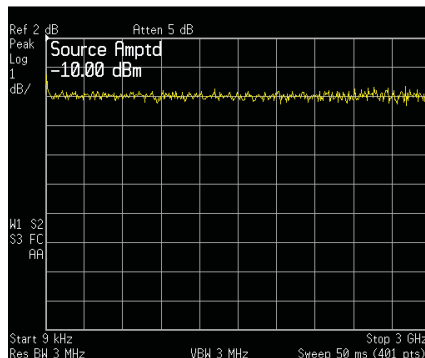


Figure 8. Corrected signal

In the modern spectrum analyzer, you can also directly store different corrections for your antenna, cable and other equipment so calibration will not be necessary every time a setting is changed.

One way to make more accurate frequency measurements is to use the frequency counter of a spectrum analyzer that eliminates many of the sources of frequency uncertainty, such as span. The frequency counter counts the zero crossings in the IF signal and offsets that count by the known frequency offsets from local oscillators in the rest of the conversion chain.

Total measurement uncertainty involves adding up the different sources of uncertainty in the spectrum analyzer. If any controls can be left unchanged such as the RF attenuator setting, resolution bandwidth, or reference level, all uncertainties associated with changing these controls drop out, and the total measurement uncertainty is minimized. This exemplifies why it is important to know your analyzer. For example, there is no added error when changing RBW in the high-performance spectrum analyzers that digitize the IF, whereas in others there is.

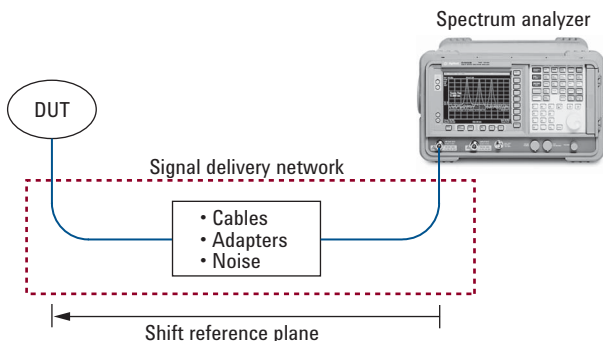


Figure 6. Test setup

Hint 3. Optimize Sensitivity When Measuring Low-level Signals

A spectrum analyzer's ability to measure low-level signals is limited by the noise generated inside the spectrum analyzer. This sensitivity to low-level signals is affected by the analyzer settings.

Figure 9, for example, depicts a 50 MHz signal that appears to be shrouded by the analyzer's noise floor. To measure the low-level signal, the spectrum analyzer's sensitivity must be improved by minimizing the input attenuator, narrowing down the resolution bandwidth (RBW) filter, and using a preamplifier. These techniques effectively lower the displayed average noise level (DANL), revealing the low-level signal.

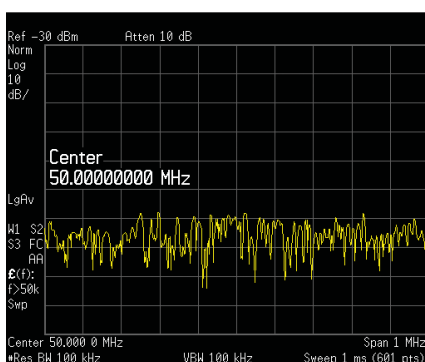


Figure 9. Noise obscuring the signal

Increasing the input attenuator setting reduces the level of the signal at the input mixer. Because the spectrum analyzer's noise is generated after the input attenuator, the attenuator setting affects the signal-to-noise ratio (SNR). If gain is coupled to the input attenuator to compensate for any attenuation changes, real signals remain stationary on the display. However, displayed noise level changes with IF gain, reflecting the change in SNR that result from any change in input attenuator setting. Therefore, to lower the DANL, input attenuation must be minimized.

An amplifier at the mixer's output then amplifies the attenuated signal to keep the signal peak at the same point on the analyzer's display. In addition to amplifying the input signal, the noise present in the analyzer is amplified as well, raising the DANL of the spectrum analyzer.

The re-amplified signal then passes through the RBW filter. By narrowing the width of the RBW filter, less noise energy is allowed to reach the envelope detector of the analyzer, lowering the DANL of the analyzer.

Figure 10 shows successive lowering of the DANL. The top trace shows the signal above the noise floor after minimizing resolution bandwidth and using power averaging. The trace that follows beneath it shows what happens with minimum attenuation. The third trace employs logarithmic power averaging, lowering the noise floor an additional 2.5 dB, making it very useful for very sensitive measurements.

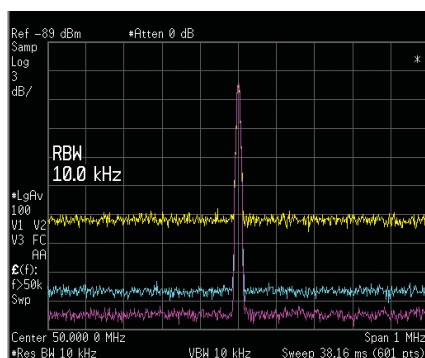


Figure 10. Signal after minimizing resolution bandwidth, input attenuator and using logarithmic power averaging

To achieve maximum sensitivity, a preamplifier with low noise and high gain must be used. If the gain of the amplifier is high enough (the noise displayed on the analyzer increases by at least 10 dB when the preamplifier is connected), the noise floor of the preamplifier and analyzer combination is determined by the noise figure of the amplifier.

In many situations, it is necessary to measure the spurious signals of the device under test to make sure that the signal carrier falls within a certain amplitude and frequency "mask". Modern spectrum analyzers provide an electronic limit line capability that compares the trace data to a set of amplitude and frequency (or time) parameters. When the signal of interest falls within the limit line boundaries, a display indicating PASS MARGIN or PASS LIMIT (on Agilent analyzers) appears. If the signal should fall out of the limit line boundaries, FAIL MARGIN or FAIL LIMIT appears on the display as shown on Figure 11 for a spurious signal.

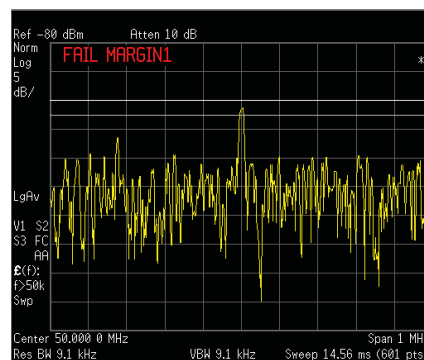


Figure 11. Using limit lines to detect spurious signals

Hint 4. Optimize Dynamic Range When Measuring Distortion

An issue that comes up with measuring signals is the ability to distinguish the larger signal's fundamental tone signals from the smaller distortion products. The maximum range that a spectrum analyzer can distinguish between signal and distortion, signal and noise, or signal and phase noise is specified as the spectrum analyzer's dynamic range.

When measuring signal and distortion, the mixer level dictates the dynamic range of the spectrum analyzer. The mixer level used to optimize dynamic range can be determined from the second-

harmonic distortion, third-order intermodulation distortion, and displayed average noise level (DANL) specifications of the spectrum analyzer. From these specifications, a graph of internally generated distortion and noise versus mixer level can be made.

Figure 12 plots the -75 dBc second-harmonic distortion point at -40 dBm mixer level, the -85 dBc third-order distortion point at a -30 dBm mixer level and a noise floor of -110 dBm for a 10 kHz RBW. The second-harmonic distortion line is drawn with a slope of 1 because for each

1 dB increase in the level of the fundamental at the mixer, the SHD increases 2 dB. However, since distortion is determined by the difference between fundamental and distortion product, the change is only 1 dB. Similarly, the third-order distortion is drawn with a slope of 2 . For every 1 dB change in mixer level, 3 rd order products change 3 dB, or 2 dB in a relative sense. The maximum 2 nd and 3 rd order dynamic range can be achieved by setting the mixer at the level where the 2 nd and 3 rd order distortions are equal to the noise floor, and these mixer levels are identified in the graph.

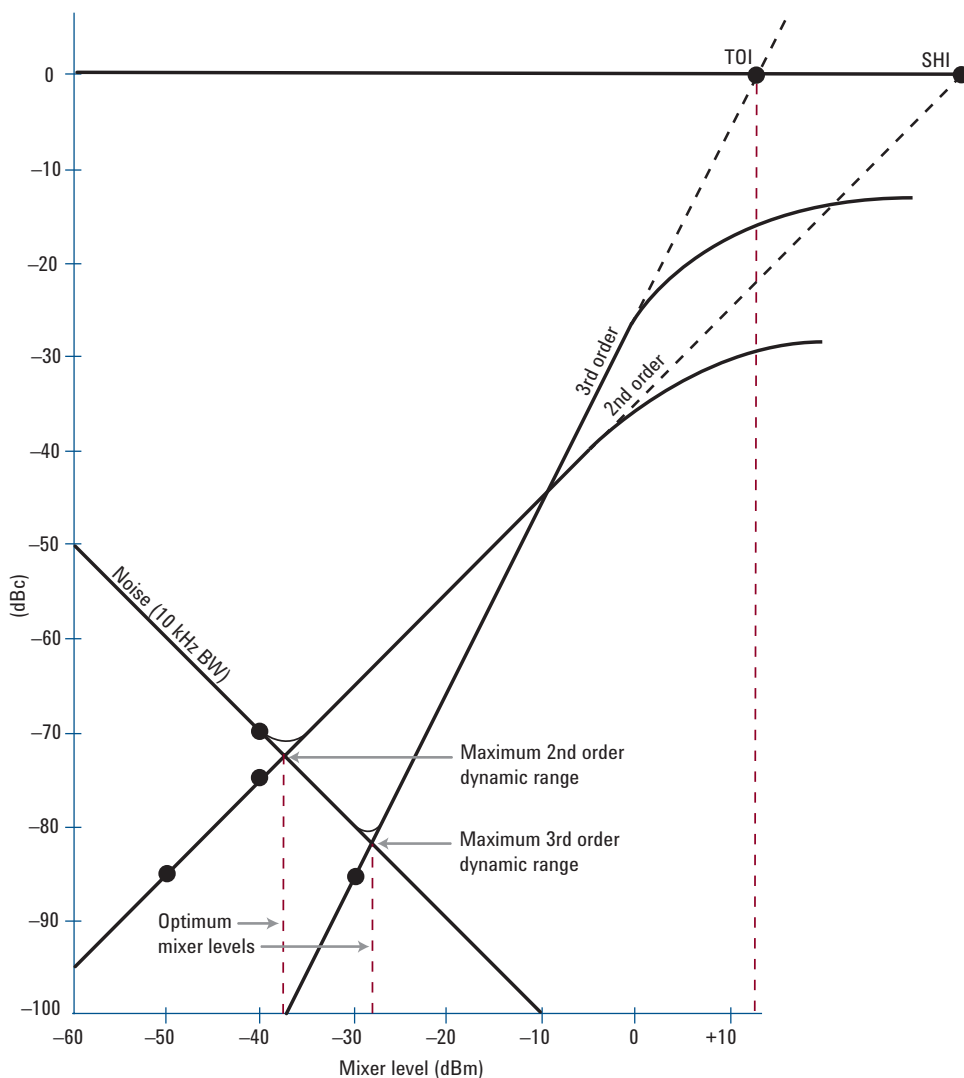


Figure 12. Dynamic range versus distortion and noise

To increase dynamic range, a narrower resolution bandwidth must be used. The dynamic range increases when the RBW setting is decreased from 10 kHz to 1 kHz as shown in Figure 13. Note that the increase is 5 dB for 2nd order and 6+ dB for 3rd order distortion.

Lastly, dynamic range for intermodulation distortion can be affected by the phase noise of the spectrum analyzer because the frequency spacing between the various spectral components (test tones and distortion products) is equal to the spacing between the test tones. For example, test tones separated by 10 kHz, using a 1 kHz resolution bandwidth sets the noise curve as shown. If the phase noise at a 10 kHz offset is only -80 dBc, then 80 dB becomes the ultimate limit of dynamic range for this measurement, instead of a maximum 88 dB dynamic range as shown in Figure 14.

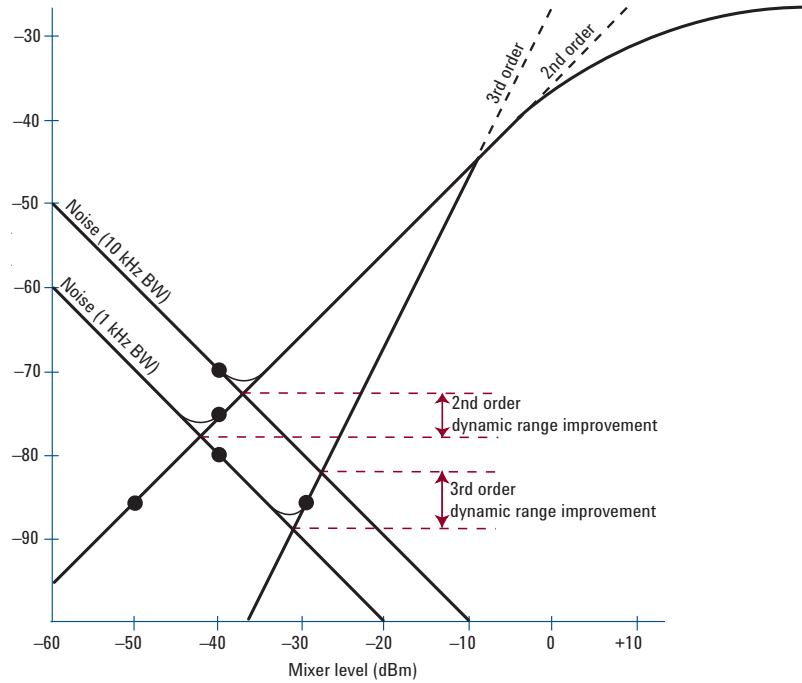


Figure 13. Reducing resolution bandwidth improves dynamic range

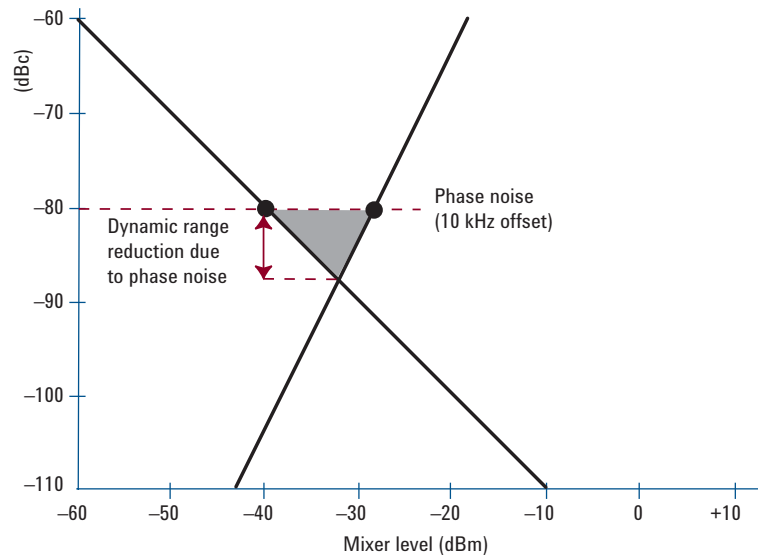


Figure 14. Phase noise can limit third order intermodulation tests

Hint 5. Identifying Internal Distortion Products

High-level input signals may cause internal spectrum analyzer distortion products that could mask the real distortion on the input signal. Using dual traces and the analyzer's RF attenuator, you can determine whether or not distortion generated within the analyzer has any effect on the measurement.

To start, set the input attenuator so that the input signal level minus the attenuator setting is about -30 dBm. To identify these products, tune to the second harmonic of the input signal and set the input attenuator to 0 dBm. Next, save the screen data in Trace B, select Trace A as the active trace, and activate Marker Δ . The spectrum analyzer now shows the stored data in Trace B and the measured data in Trace A, while Marker Δ shows the amplitude and frequency difference between the two traces. Finally, increase the RF attenuation by 10 dB and compare the response in Trace A to the response in Trace B.

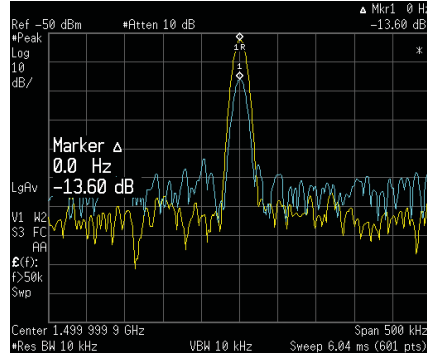


Figure 15. Internally generated distortion products

If the responses in Trace A and Trace B differ, as in Figure 15, then the analyzer's mixer is generating internal distortion products due to the high level of the input signal. In this case, more attenuation is required.

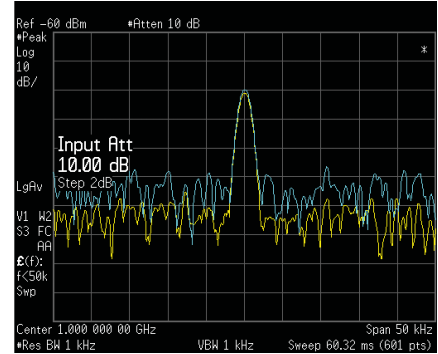


Figure 16. Externally generated distortion products

In Figure 16, since there is no change in the signal level, the internally generated distortion has no effect on the measurement. The distortion that is displayed is present on the input signal.

Hint 6. Optimize Measurement Speed When Measuring Transients

Fast sweeps are important for capturing transient signals and minimizing test time. To optimize the spectrum analyzer performance for faster sweeps, the parameters that determine sweep time must be changed accordingly.

Sweep time for a swept-tuned super-heterodyne spectrum analyzer is approximated by the span divided by the square of the resolution bandwidth (RBW). Because of this, RBW settings largely dictate the sweep time. Narrower RBW filters translate to longer sweep times, which translate to a tradeoff between sweep speed and sensitivity. As shown in Figure 17, a 10x change in RBW approximates to a 10 dB improvement in sensitivity.

A good balance between time and sensitivity is to use fast fourier transform (FFT) that is available in the modern high-performance spectrum analyzers. By using FFT, the analyzer is able to capture the entire span in one measurement cycle. When using FFT analysis, sweep time is dictated by the frequency span instead of the RBW setting. Therefore, FFT mode proves shorter

sweep times than the swept mode in narrow spans. The difference in speed is more pronounced when the RBW filter is narrow when measuring low-level signals. In the FFT mode, the sweep time for a 20 MHz span and 1 kHz RBW is 747.3 ms compared to 24.11 s for the swept mode as shown in Figure 18 below. For much wider spans and wide RBW's, swept mode is faster.

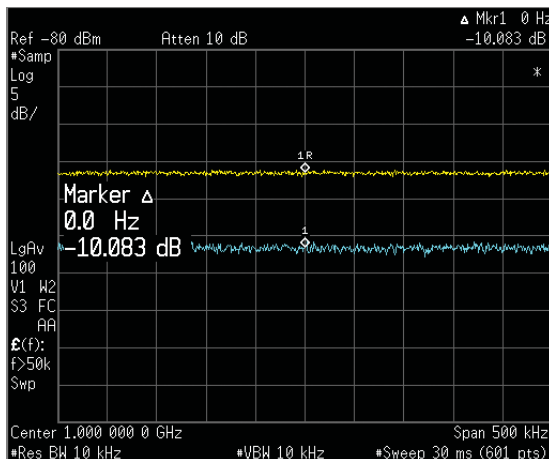


Figure 17. A 10x change in RBW approximates to a 10 dB decrease in sensitivity

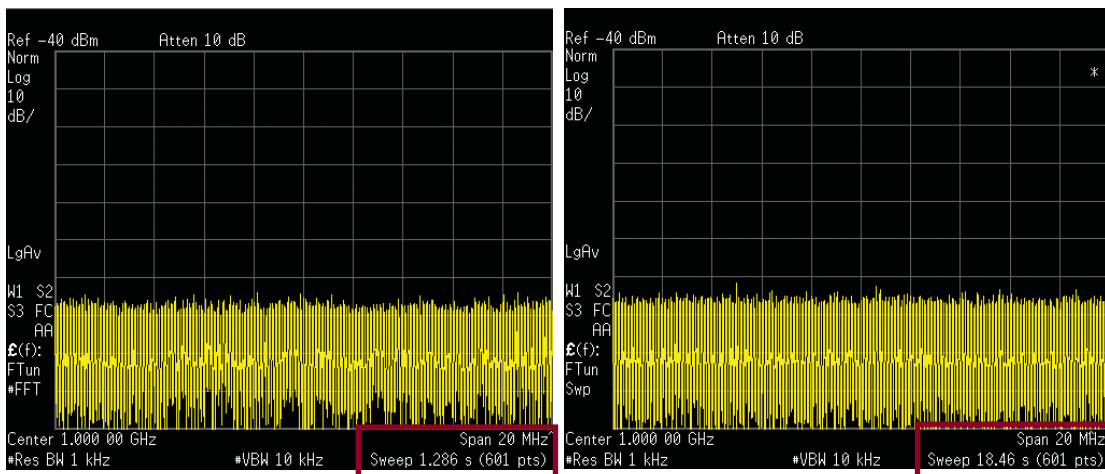


Figure 18. Comparing the sweep time for FFT and swept mode

Hint 7. Selecting the Best Display Detection Mode

Modern spectrum analyzers digitize the signal either at the IF or after the video filter. The choice of which digitized data to display depends on the display detector following the ADC. It is as if the data is separated into buckets, and the choice of which data to display in each bucket becomes affected by the display detection mode.

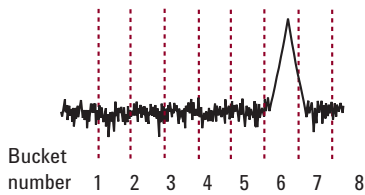


Figure 19. Sampling buckets

Positive peak, negative peak and sample detectors are shown in Figure 20. Peak detection mode detects the highest level in each bucket, and is a good choice for analyzing sinusoids, but tends to over-respond to noise. It is the fastest detection mode.

Sample detection mode displays the center point in each bucket, regardless of power. Sample detection is good for noise measurements, and accurately indicates the true randomness of noise. Sample detection, however, is inaccurate for measuring continuous wave (CW) signals with narrow resolution bandwidths, and may miss signals that do not fall on the same point in each bucket.

Negative peak detection mode displays the lowest power level in each bucket. This mode is good for AM or FM demodulation and distinguishes between random and impulse noise. Negative peak detection does not give the analyzer better sensitivity, although the noise floor may appear to drop. A comparative view of what each detection mode displays in a bucket for a sinusoid signal is shown in Figure 20.

Higher performance spectrum analyzers also have a detection mode called Normal detection, shown in Figure 21. This sampling mode dynamically classifies the data point as either noise or a signal, providing a better visual display of random noise than peak detection while avoiding the missed-signal problem of sample detection.

Average detection can provide the average power, voltage or log-power (video) in each bucket. Power averaging calculates the true average power, and is best for measuring the power of complex signals. Voltage averaging averages the linear voltage data of the envelope signal measured during the bucket interval. It is often used in EMI testing, and is also useful for observing rise and fall behavior of AM or pulse-modulated signals such as radar and TDMA transmitters. Log-power (video) averaging averages the logarithmic amplitude values (dB) of the envelope signal measured during the bucket interval. Log power averaging is best for observing sinusoidal signals, especially those near noise because noise is displayed 2.5 dB lower than its true level and improves SNR for spectral (sinusoidal) components.

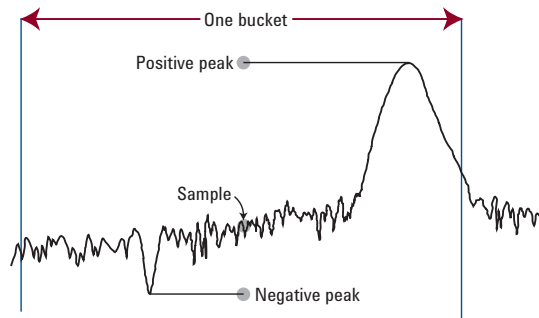


Figure 20. Trace point saved in memory is based on detector type algorithm

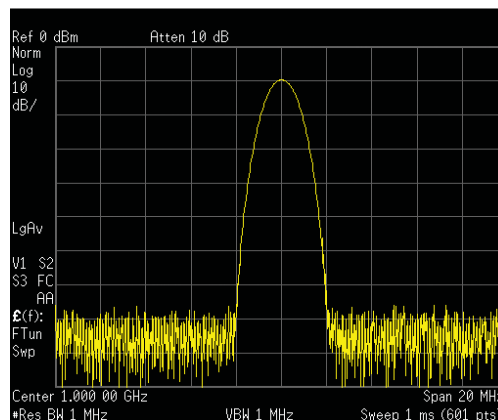


Figure 21. Normal detection displays maximum values in buckets where the signal only rises or only falls

Hint 8. Measuring Burst Signals: Time Gated Spectrum Analysis

How do you analyze a signal that consists of a burst (pulsed) RF carrier that carries modulation when pulsed on? If there is a problem, how do you separate the spectrum of the pulse from that of the modulation? Analyzing burst signals (pulses) with a spectrum analyzer is very challenging because in addition to displaying the information carried by the pulse, the analyzer displays the frequency content of the shape of the pulse (pulse envelope) as well. The sharp rise and fall times of the pulse envelope can create unwanted frequency components that add to the frequency content of the original signal. These unwanted frequency components might be so bad that they completely obscure the signal of interest.

Figure 22, for example, depicts the frequency content of a pulse carrying a simple AM signal. In this case, the AM sidebands are almost completely hidden by the pulse spectrum.

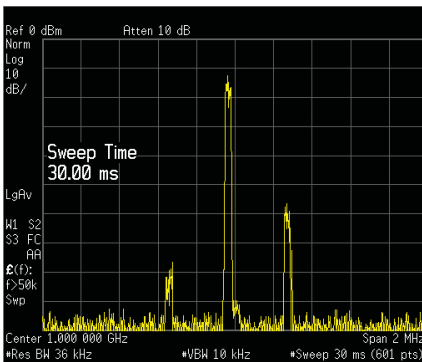


Figure 22. Signal without time-gating

Time gated spectral analysis permits analysis of the contents of the pulse without the effect of the envelope of the pulse itself. One way of performing time-gating is to place a gate (switch) in the video path of the spectrum analyzer as shown in Figure 23. This method of time-gating is called gated video.

In a time gated measurement, the analyzer senses when the burst starts, then triggers a delay so the resolution filter has time to react to the sharp rise time of the pulse, and finally stops the analysis before the burst ends. By doing this, only the information carried by the pulse is analyzed, as is shown in Figure 24. It is now clear that our pulse contained a 40 MHz carrier modulated by a 100 kHz sinusoidal signal.

Two other types of time-gating available in the modern high-performance spectrum analyzer are gated-LO and gated-FFT. Gated-LO sweeps the local oscillator during part of the pulsed signal so several trace points can be recorded for each occurrence of the signal. Whereas gated-FFT takes an FFT of the digitized burst signal removing the effect of the pulse spectrum. Both provide advantages of increased speed.

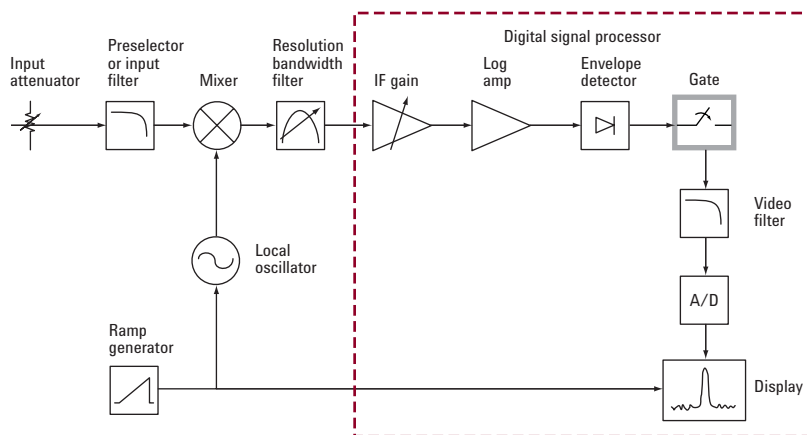


Figure 23. Spectrum analyzer block diagram with gated video time-gating

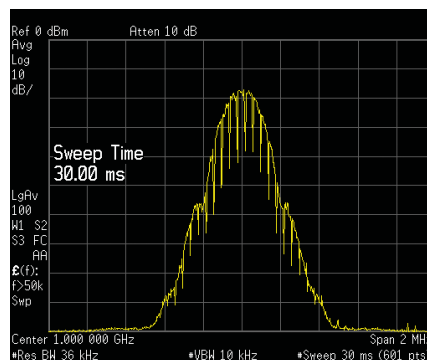


Figure 24. Signal with time-gating

Agilent Spectrum Analyzers

www.agilent.com

Agilent PSA Series

These spectrum analyzers offer high-performance spectrum analysis up to 50 GHz, with powerful one-button measurements, a versatile feature set, and a leading-edge combination of flexibility, speed, accuracy, analysis bandwidth, and dynamic range.

From millimeter wave and phase noise, noise figure measurements to spur searches and digital modulation analysis, the PSA Series provides unique and comprehensive solutions to R&D and manufacturing engineers in cellular and emerging wireless communications, aerospace, and defense.



Figure 25. Agilent PSA Series spectrum analyzer

Agilent ESA Series

The ESA Series spectrum analyzers provide scalable basic and mid-performance spectrum analysis, for general-purpose or application focused measurements from cellular communications to wireless networking to cable TV. The ESA is available as an Express Analyzer with a two-week availability and are value priced.



Figure 26. Agilent ESA Series spectrum analyzer

MXA Signal Analyzer

The MXA signal analyzer takes signal and spectrum analysis to the next generation, offering the highest performance in a midrange signal analyzer with the industry's fastest signal and spectrum analysis eliminating the compromise between speed and performance.

With a broad set of applications and demodulation capabilities, an intuitive user interface, outstanding connectivity and powerful one button measurements the MXA is ideal for R&D and manufacturing.



Figure 27. N9020A MXA signal analyzer

Related Literature

Spectrum Analysis Basics, Application Note 150, literature number 5952-0292

Optimizing Spectrum Analyzer Measurement Speed, Application Note 1318, literature number 5968-3411E

Optimizing Dynamic Range for Distortion Measurements, Product Note, literature number 5980-3079EN

Optimizing Spectrum Analyzer Amplitude Accuracy, Application Note 1316, literature number 5968-3659E

Selecting the Right Signal Analyzer for Your Needs, Selection Guide, literature number 5968-3413E

PSA Series Swept and FFT Analysis, Product Note, literature number 5980-3081EN

Web Resource

www.agilent.com/find/spectrumanalyzers

For more information on Agilent Technologies' products, applications or services, please contact your local Agilent office. The complete list is available at:

www.agilent.com/find/contactus

Americas

Canada	(877) 894-4414
Latin America	305 269 7500
United States	(800) 829-4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Thailand	1 800 226 008

Europe & Middle East

Austria	0820 87 44 11
Belgium	32 (0) 2 404 93 40
Denmark	45 70 13 15 15
Finland	358 (0) 10 855 2100
France	0825 010 700*

*0.125 €/minute

Germany 01805 24 6333**

**0.14 €/minute

Ireland	1890 924 204
Israel	972-3-9288-504/544
Italy	39 02 92 60 8484
Netherlands	31 (0) 20 547 2111
Spain	34 (91) 631 3300
Sweden	0200-88 22 55
Switzerland	0800 80 53 53
United Kingdom	44 (0) 118 9276201

Other European Countries:

www.agilent.com/find/contactus

Revised: March 27, 2008

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 1998, 2000, 2004, 2005, 2008

Printed in USA, May 13, 2008

5965-7009E



Agilent Technologies